




READ AND SAVE THESE INSTRUCTIONS

MOBILE EVAPORATIVE COOLER MBC2000

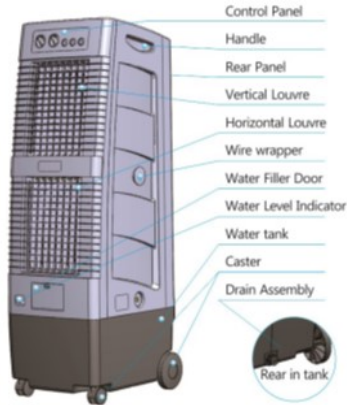

1 Safety Rules

IN ORDER TO REDUCE THE POSSIBILITY OF FIRES, ELECTRIC SHOCK OR PERSONAL INJURY

- Unit must be in the OFF position and Unplugged from power receptacle when performing any maintenance.
- To reduce the risk of electric shock, plug unit into a properly grounded receptacle.
- To reduce the risk of electric shock, install only on a circuit protected with a Ground Fault Circuit Interrupter (GFCI).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any cooler with a damaged cord or plug. Discard the cooler or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.



WARNING: To reduce the risk of fire or electric shock, do not use this fan with any "solid-state fan speed control device."


2 Location

KEY OPERATIONAL POINTS

- Your cooler must be positioned in front of an open window or door if it is to operate effectively.
- Always ensure that there is another open window or door through which the air can exhaust from the room.
- Ensure the filter is kept clean throughout the summer season.
- At the end of each day run your cooler on FAN ONLY for 30 minutes to dry out the filter.
- Prior to putting your cooler away for winter, always:
 - Drain the tank and wipe out clean.
 - Clean the filter.
 - Reassemble and run on FAN ONLY for 30 minutes to dry out the filter.

LOCATION! LOCATION! LOCATION!

Having completed assembly of your cooler, position the unit with its back to an open window or door. This will allow fresh air to be drawn through the cooler and exhausted from the room. Constant air change is essential and part of the fresh air benefit from evaporative aircooling. Remember your cooler has been designed to operate even if it runs out of water. No damage will be caused to the pump if your cooler runs out of water.

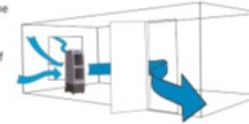

3 To Operate The Cooler

- Open water filler door.
- Fill cooler with water.
- Watch water level indicator and stop adding water as "full" graphic enters indicator window.



4 To Operate The Cooler

- Connect to power point



 
- Seclecting Cooling Mode

- Open windows or doors as per P3 (Location)
- Switch "ON" the power.
- Switch "A" the pump for cooling effect.
- Switch "B" the air direction automatically.
- Select desired fan speed.
- Make the desired operative time.



5 Cooler Maintenance (DISCONNECT FROM THE POWER SOCKET!)


- Clean the filter



Using a coin to turn the key to a vertical position then take the key out

Pull out the filter and clean it.


- Clean the Cooling Pad

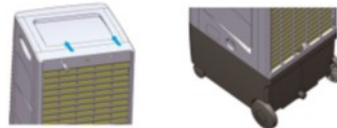

Push the key in the holes until the holder unlocked

Then put the key into the hole at the bottom of plastic rear panel and unlock the holder, leaving the key there.

- Pull out the rear panel
- Withdraw the Cooling Pad and clean it.

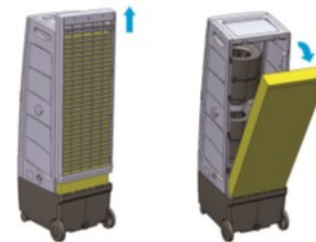

- Drain the water tank

Remove the drain plug, lean the cooler and draining the water from the tank.



6 Trouble shooting

Problem:	Cause/Remedy:
1. Cooler fails to work at all	1.1 Check that the unit is plugged properly. 1.2 Check the POWER switch, push it to "ON". 1.3 The TIMER switch is "OFF", turn it to "ON".
2. Cooler does not pump	2.1 Pump is not activated. Push the PUMP switch to "ON". 2.2 water level is low. Fill with water and make sure pump is activated. 2.3 Pump may be defective. Replace pump. 2.4 The TIMER switch is "OFF", turn it to "ON".
3. Fan does not operate	3.1 Check that unit is plugged properly 3.2 Check the POWER switch, push it to "ON". 3.3 If connected to a GFCI outlet, check if it is tripped. 3.4 The TIMER switch is "OFF", turn it to "ON".
4. Louver does not operate	4.1 Louver does not move. Louver switch position to "ON".
5. Water leakage	5.1 Check the cap of the drain assembly, make sure it tightened.

NOTICE: This product may temporarily produce an Odd Odor when first turned on. This is NORMAL and will dissipate after a few hours.